



ActivBoard and Projector Tips

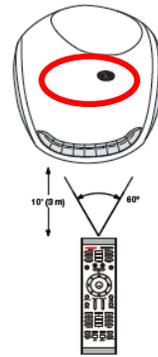

- When using the remote stand behind the projector with the remote pointed towards the sensor. Stand about 3 ft back. When you click power the projector will take about 30 seconds to warm up. It is ready when all the lights are blue.

➤ Screen Image Doesn't Fit on Whiteboard



1. Ctrl/Alt/F12
2. Click Display Settings
3. Click and change the screen resolution to 800 X 600
4. Click OK
5. Click OK
6. Repeat steps 1 through 4 changing the resolution back to 1024 X 768.

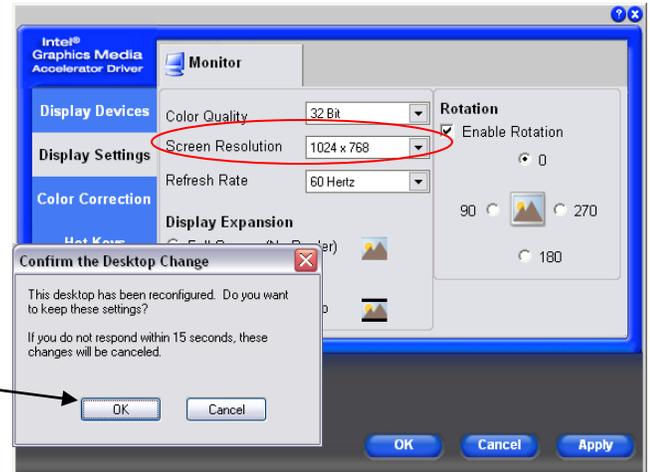

➤ If the pen is not aligned correctly then calibrate the board:

1. Click the ActivInspire icon on the task bar in the lower right hand corner of your monitor → 
2. Click Calibrate
3. Go to the board and follow the instructions on the board

➤ If your screen is like the picture below you have activated Picture in Picture and need to turn it off:

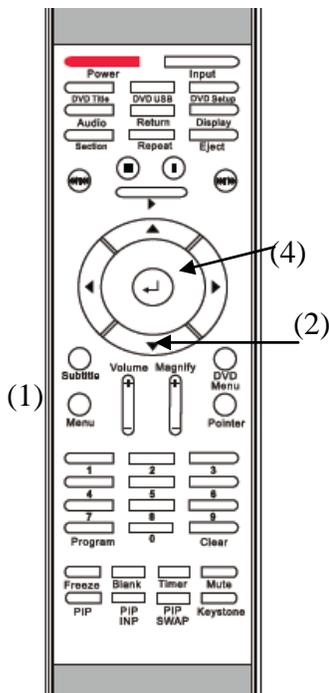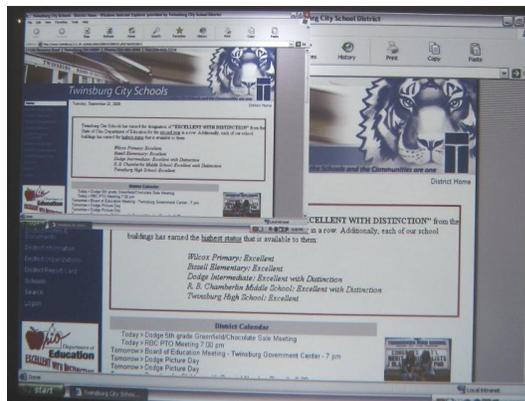

To turn off Picture in Picture:

1. Click the Menu button (1) on the projector remote
2. Click the down button (2) twice until the Picture in Picture Icon (3) is highlighted.
3. Click Enter (4) to Choose PIP on/of
4. Click Enter to turn off PIP
5. Click the Menu button again

